
54	NO MODE CHANGE
DESCRIPTION	• HOLD mode not selected or not canceled
[TROUBLESHOOTING HINTS] Inspect parts and wiring, and repair or replace malfunctioning parts as necessary ① HOLD switch malfunction ② Powertrain control module	